



1

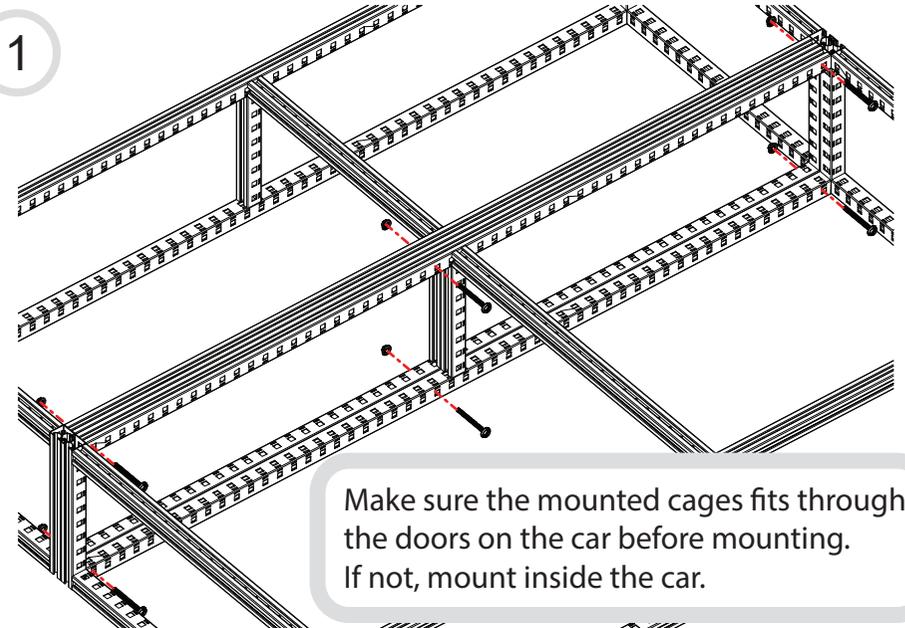


Make sure the mounted cages fits through the doors on the car before mounting.
If not, mount inside the car.

2

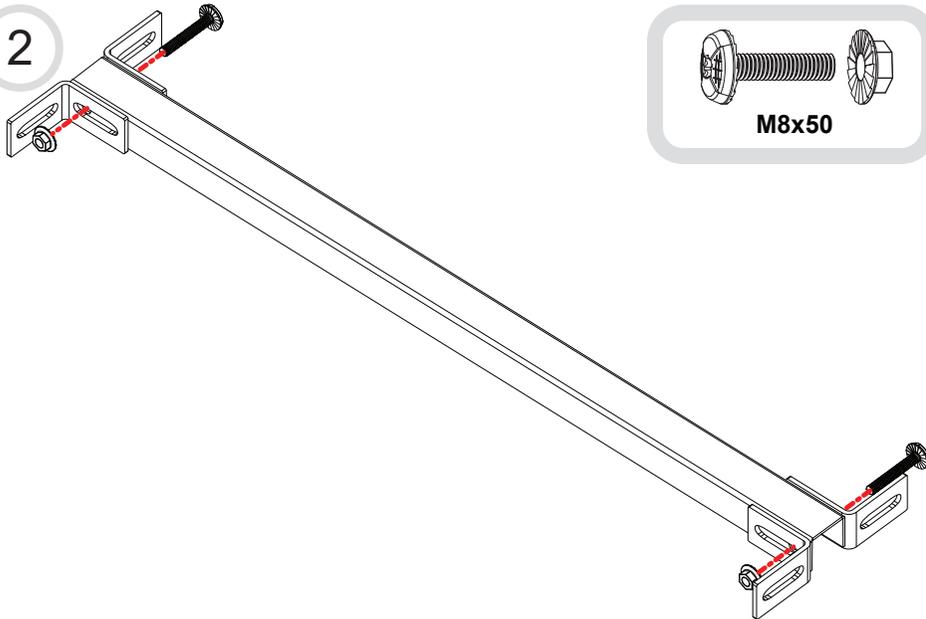



M8x50

3

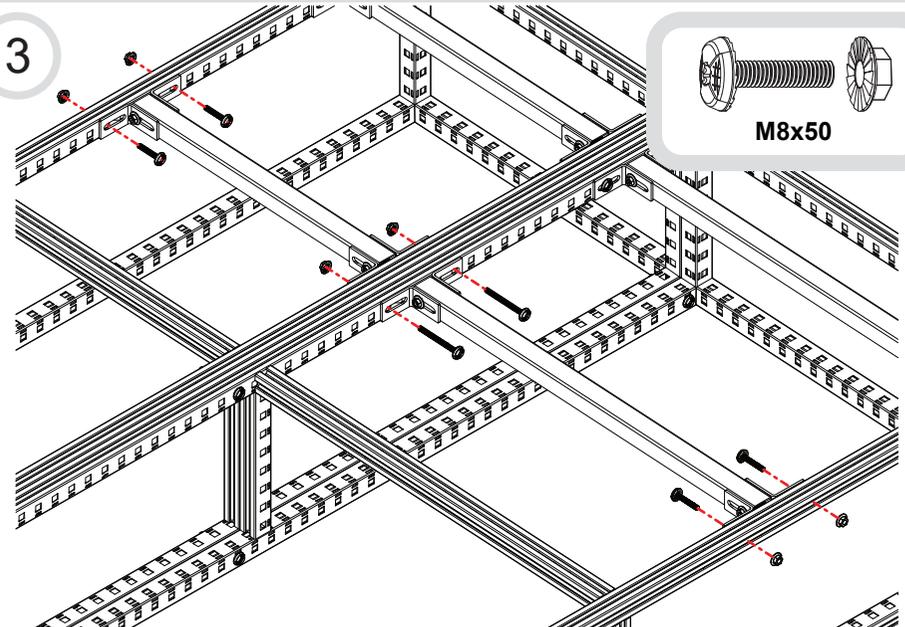



M8x50

4

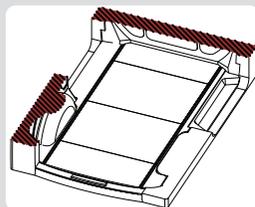
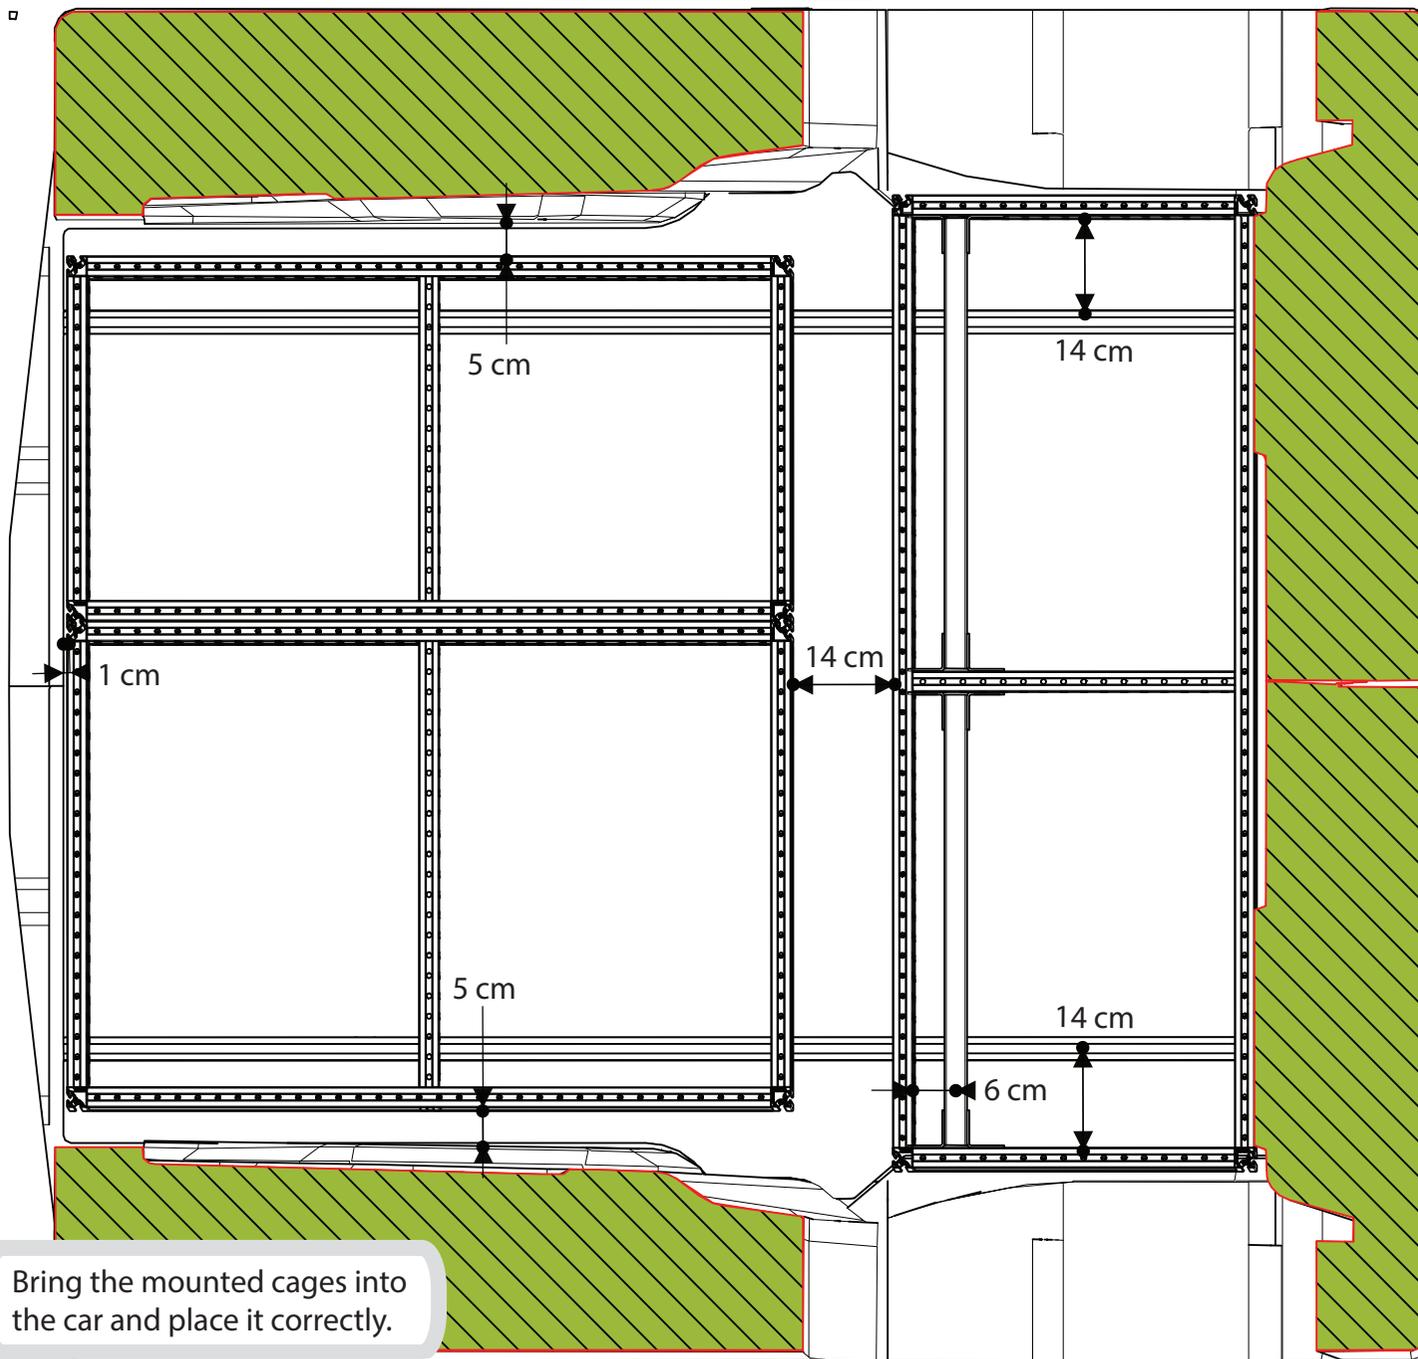


Bring the mounted cages into the car and place it correctly.




4

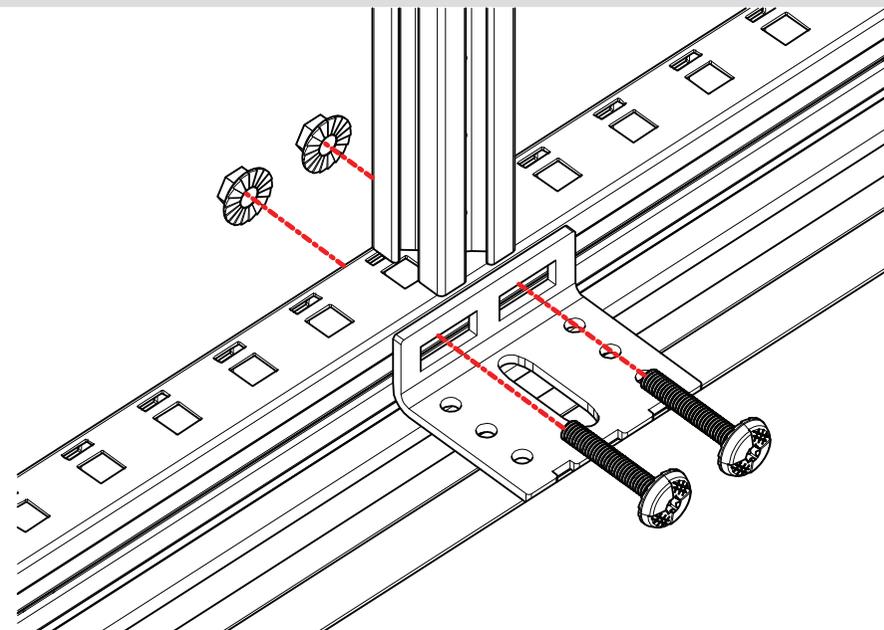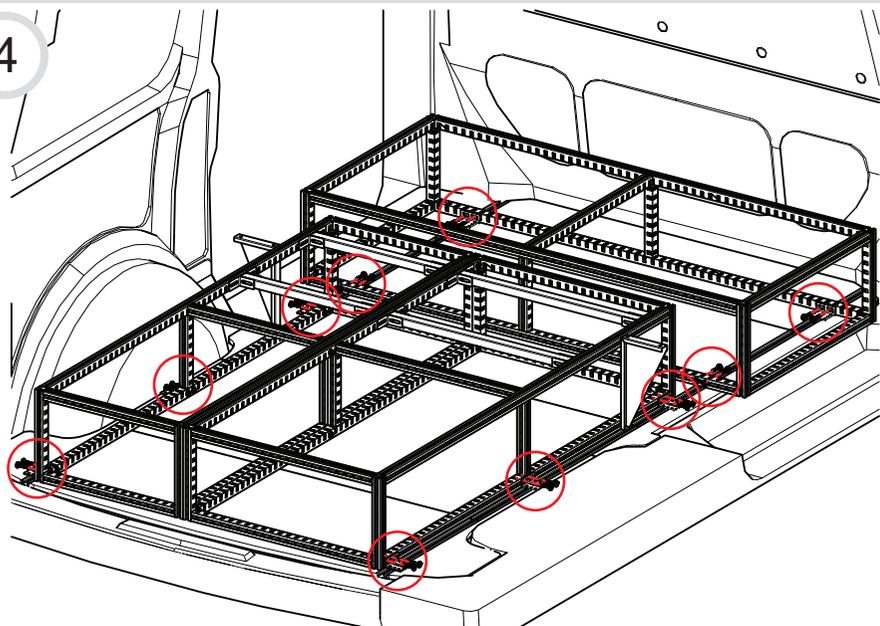

3

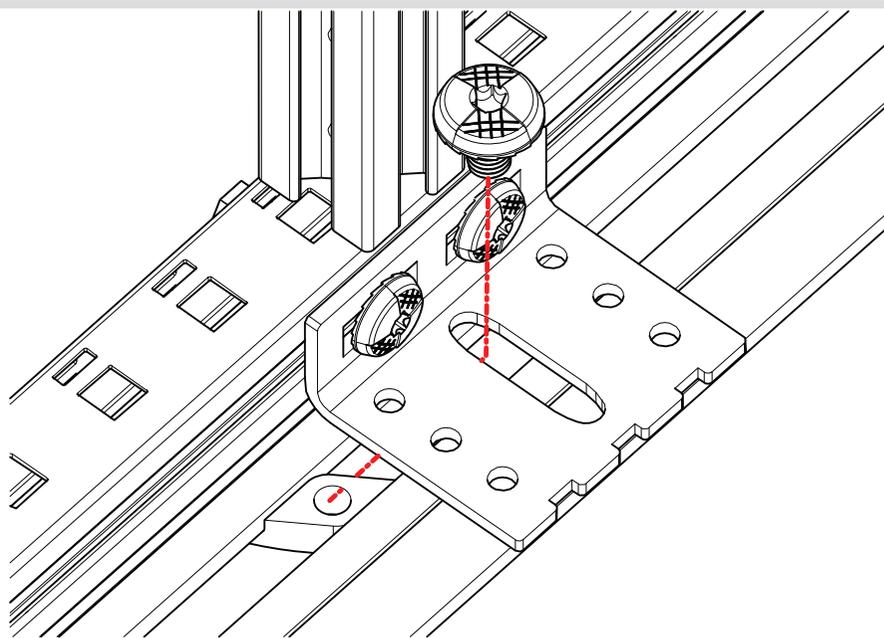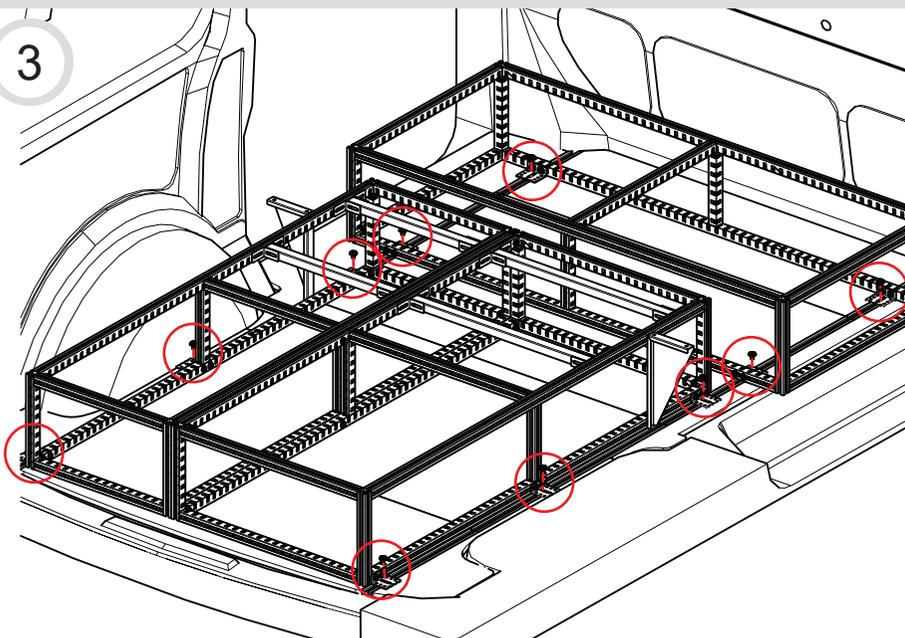

1

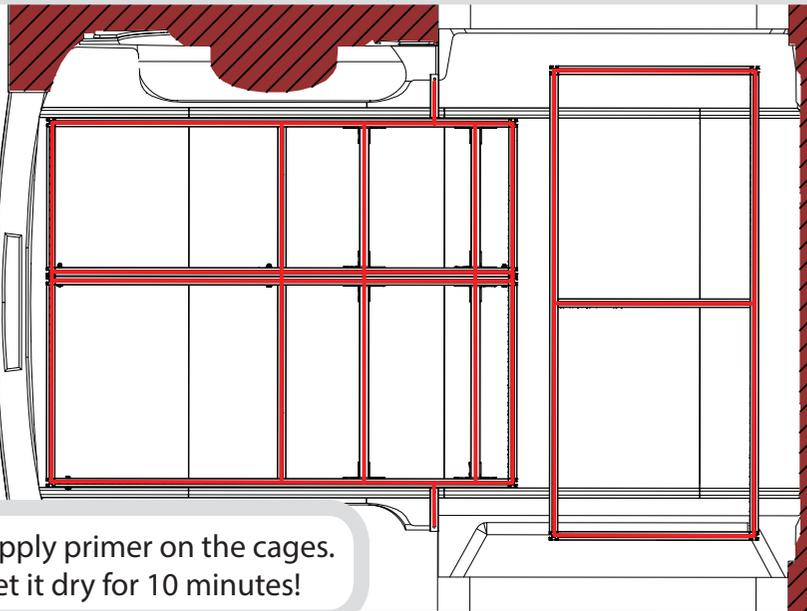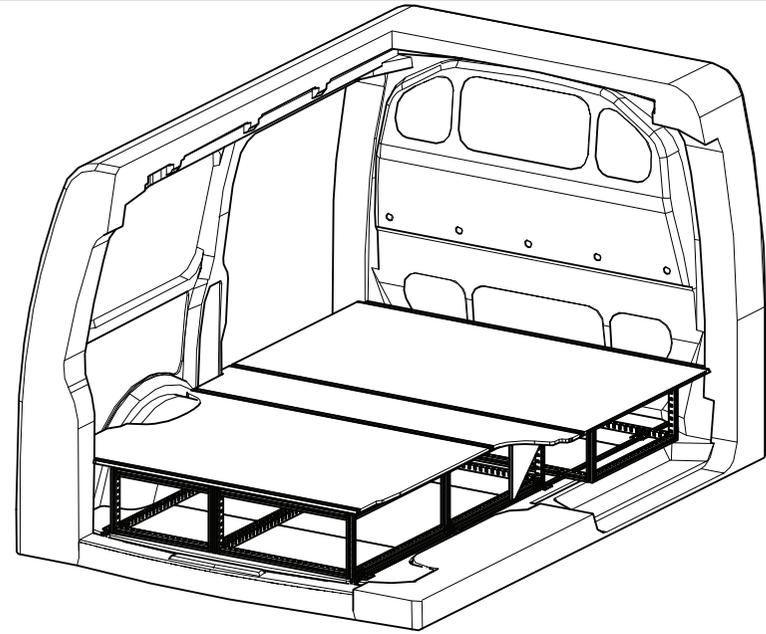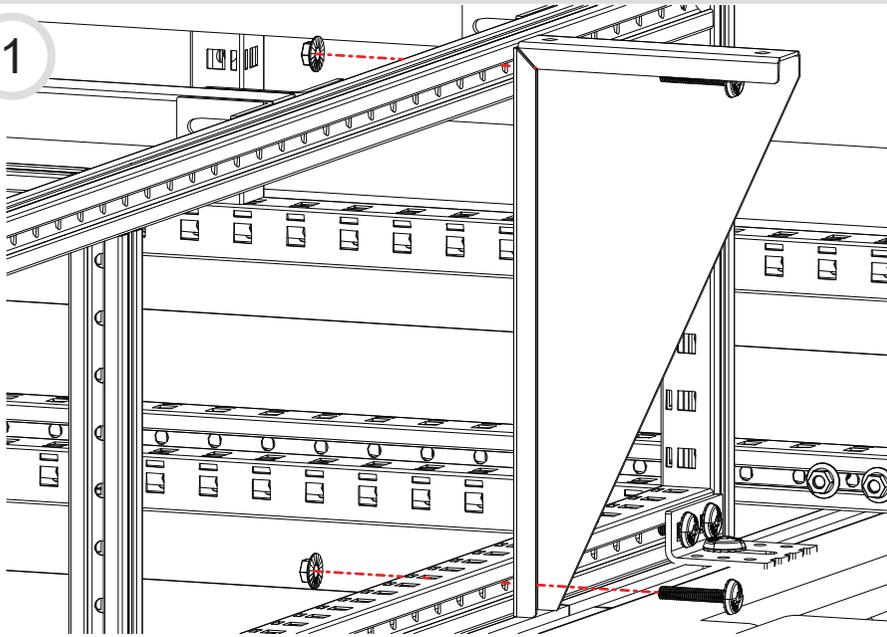

Apply primer on the cages.
Let it dry for 10 minutes!

SAFETY GEAR FOR PRIMER



EQUIPMENT FOR PRIMER





SIKA Primer
Item no 39230



Primer sponge
Item no 39231

Apply primer where the floor is marked red.
Use wide stripes (about 6 cm) of primer to get a bigger tolerance.
Let it dry for 10 minutes!

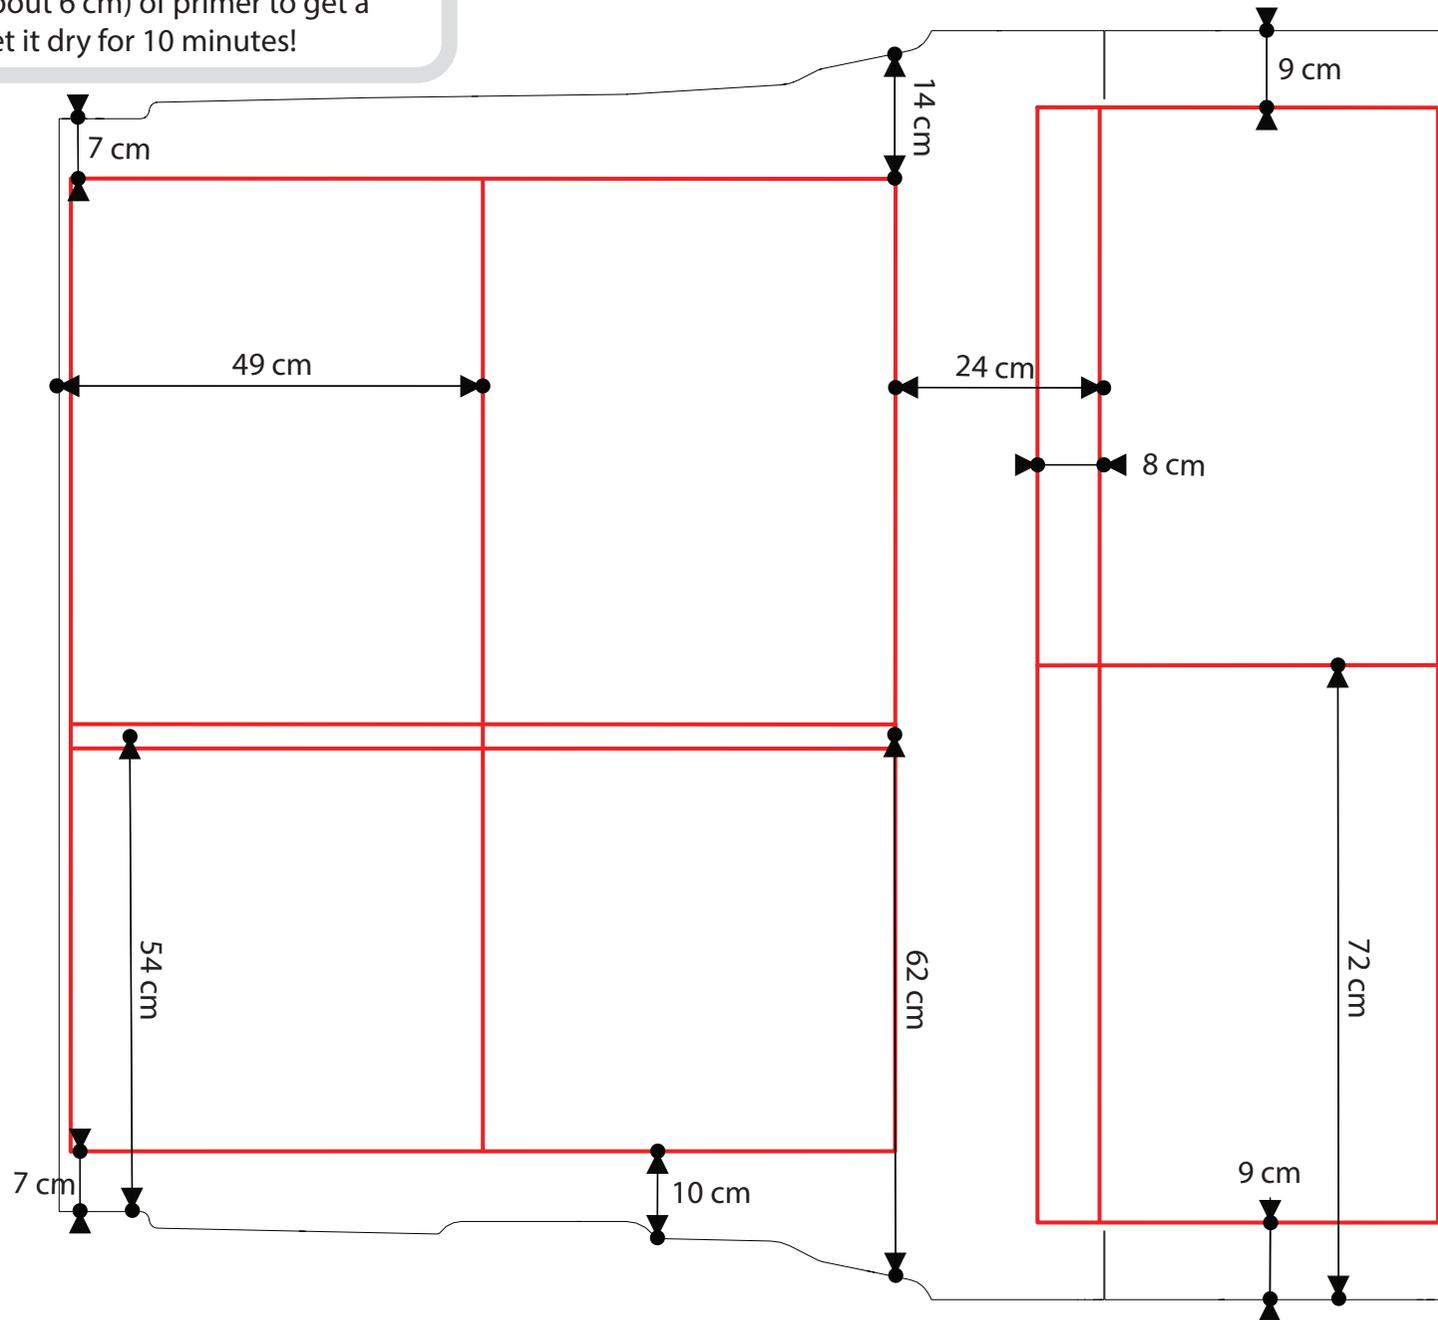

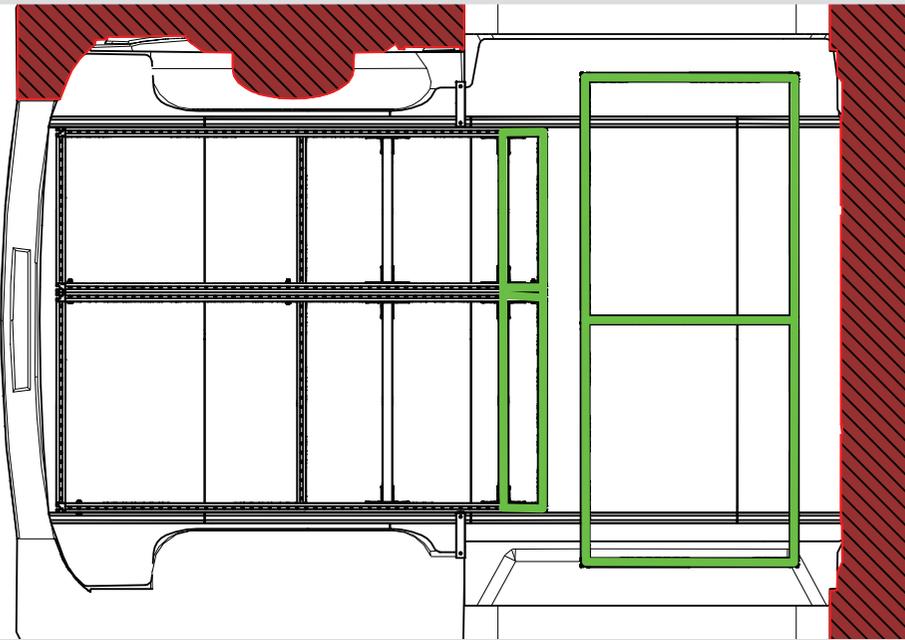

1. Apply glue to the cages in the van
2. Start assembling from front and go backwards in the vehicle.
3. Ensure that the glue string is applied to the entire length of all cages. Make sure the shape of the glue string is according to the triangular opening in the nozzle.*

EQUIPMENT FOR GLUE GUN




SIKA Glue 600 ml
Item no 39240



Glue Nozzle
Item no 39235



Glue Gun
Item no 39260

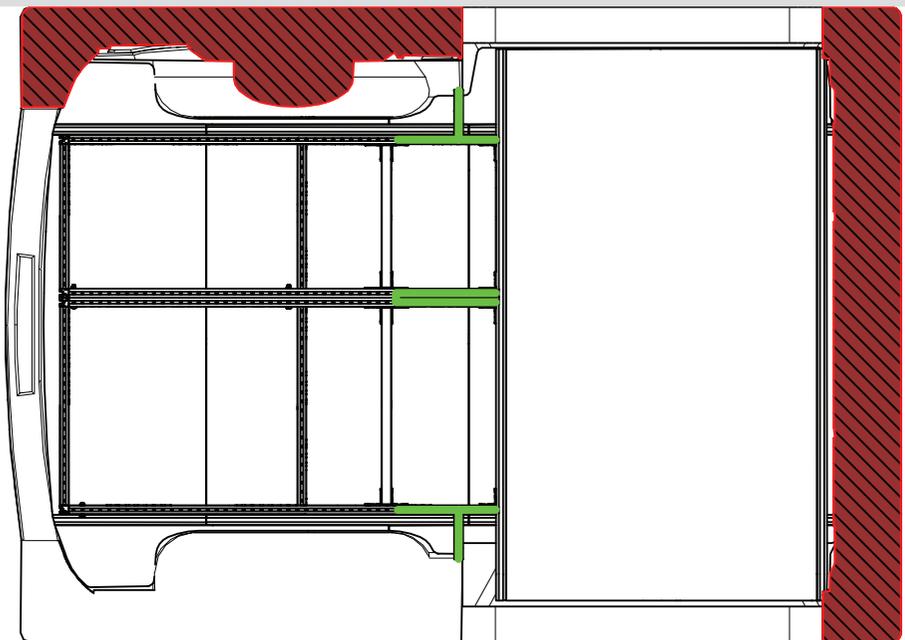

EQUIPMENT FOR GLUE STATION



Glue Barrel - 23L
Item no 39264



Glue Nozzle
Item no 39267



SIKA Booster
Item no 39265





Mixer Tube
Item no 39266

*



SAFETY GEAR FOR GLUE



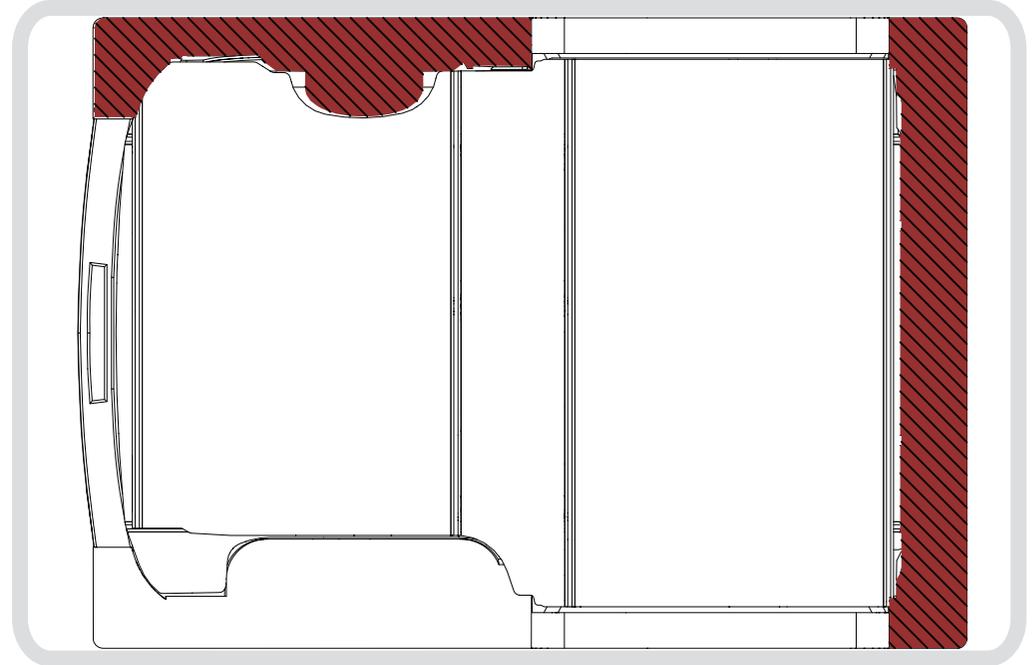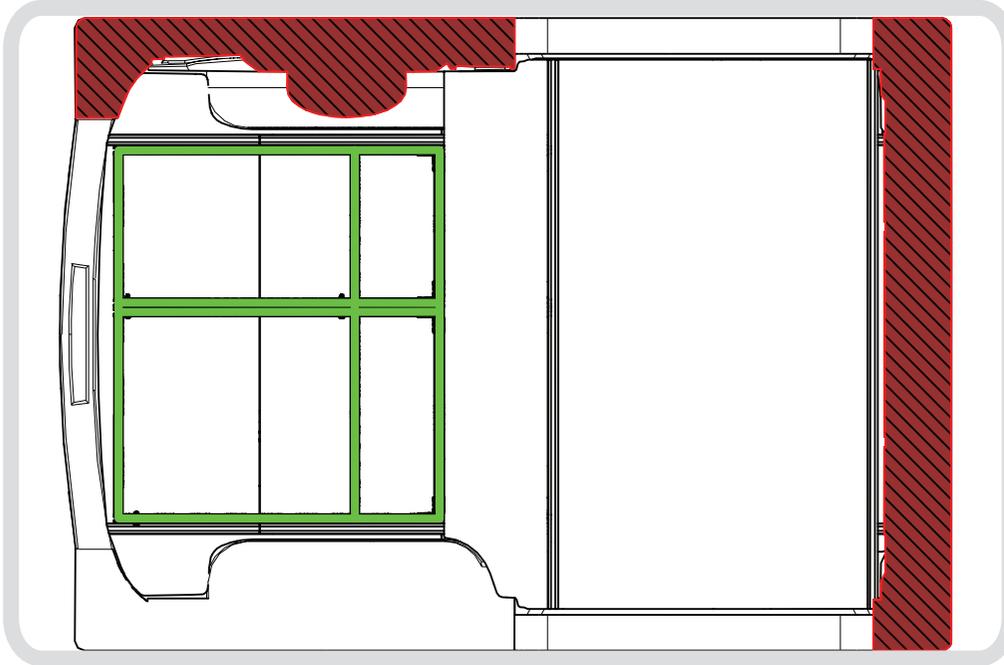

Opening time 30 min
Curing time 90 min (start installation of Modul-System)
Vehicle on the road 24h